## **100i12MTL (Timber)** For 100PSi12MTL, 100PPSi12MTL, 100PASi12MTL, 100MNDi12MTL

When 100i12 MTL is running parrallel to joist/bearer



## When 100i12 MTL is running perpendicular to joist/bearer



100i20MTL527082015TC

Stormtech